



Recommended donning & doffing procedures for chemical protective clothing

Follow the steps recommended below to dress and undress in a safe and simple manner, thereby limiting any potential for contamination after working in a hazardous environment.


For type 3/4/5/6 coveralls*

(We would recommend a buddy system or technical assistance)

TYPICAL ACCESSORIES:



The right size for increased protection and comfort

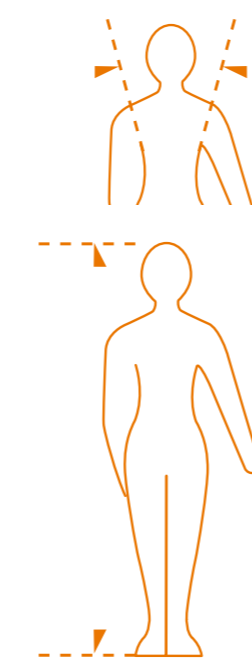


84 - 92	92 - 100	100 - 108	108 - 116	116 - 124	124 - 132	cm
SM	MD	LG	XL	2XL	3XL	SIZE
162 - 170	168 - 176	174 - 182	180 - 188	186 - 194	192 - 200	cm

Typical products following this procedure: Tyvek® 600 Plus, Tyvek® 800J, Tychem® 2000 C, Tychem® 4000 S, Tychem® 6000 F

Donning

Doffing

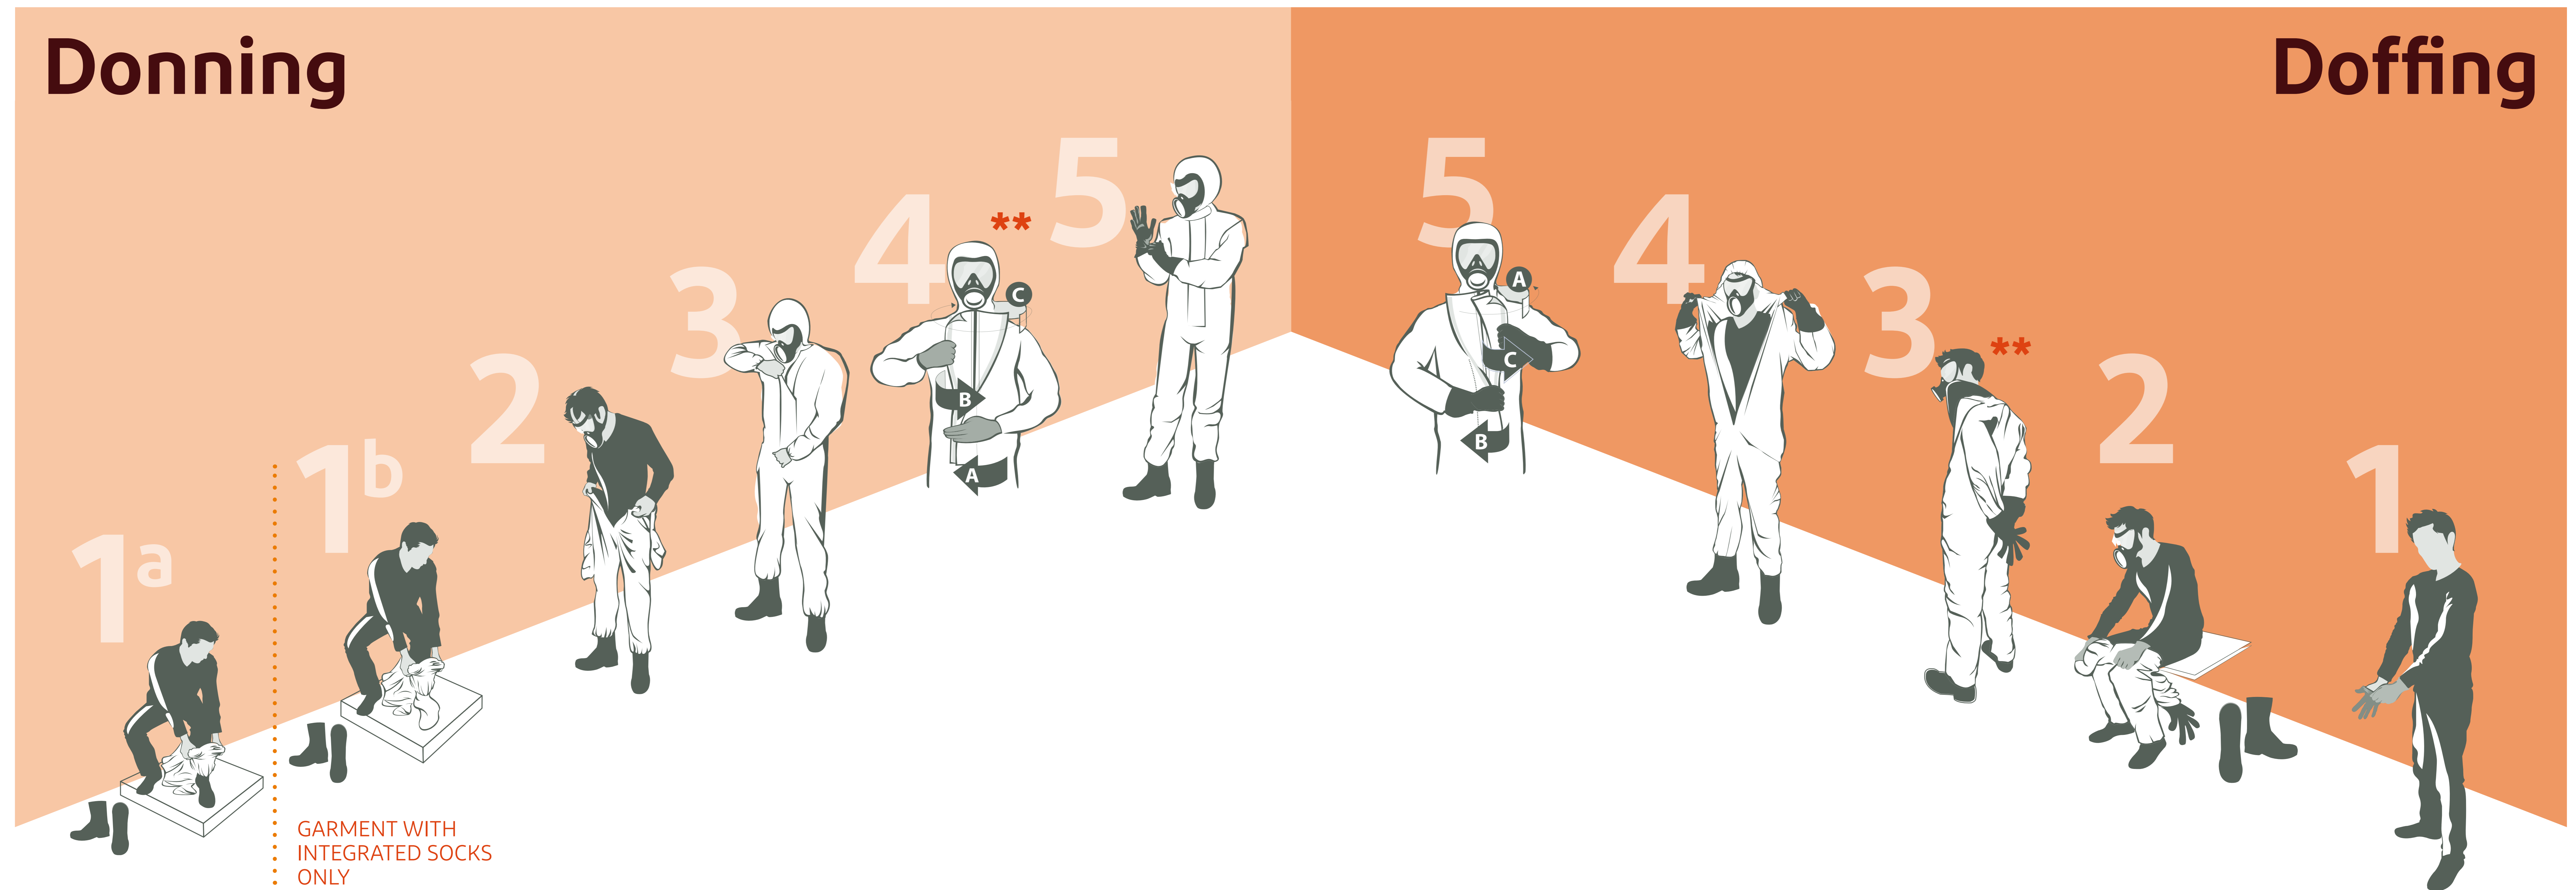

GARMENT WITH INTEGRATED SOCKS ONLY

* Including Tychem® range, Tyvek® 600 Plus coverall and Tyvek® 800 J coveralls.

** We recommend to request second person's help to stick the flap properly, and to remove the garment without getting contaminated. In case no one can help, the use of a mirror is recommended.

