




# Recommended donning & doffing procedures for chemical protective clothing

Follow the steps recommended below to dress and undress in a safe and simple manner, thereby limiting any potential for contamination after working in a hazardous environment.

## For type 5/6 coveralls



### The right size for increased protection and comfort

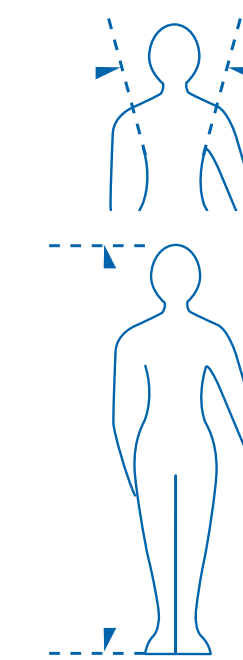


84 - 92	92 - 100	100 - 108	108 - 116	116 - 124	124 - 132	cm
SM	MD	LG	XL	2XL	3XL	SIZE
162 - 170	168 - 176	174 - 182	180 - 188	186 - 194	192 - 200	cm

Typical products following this procedure: Tyvek® 800 J, Tyvek® 600 Plus\*, Tyvek® 500 Labo, Tyvek® 500 Xpert, Tyvek® 500 HP, Tyvek® 500 Industry, Tyvek® 500 HV, Tyvek® 400 Dual, Tyvek® 400 DualFinish, Tyvek® 400 DualCombi, Tyvek® 200 EasySafe

## Donning



## Doffing

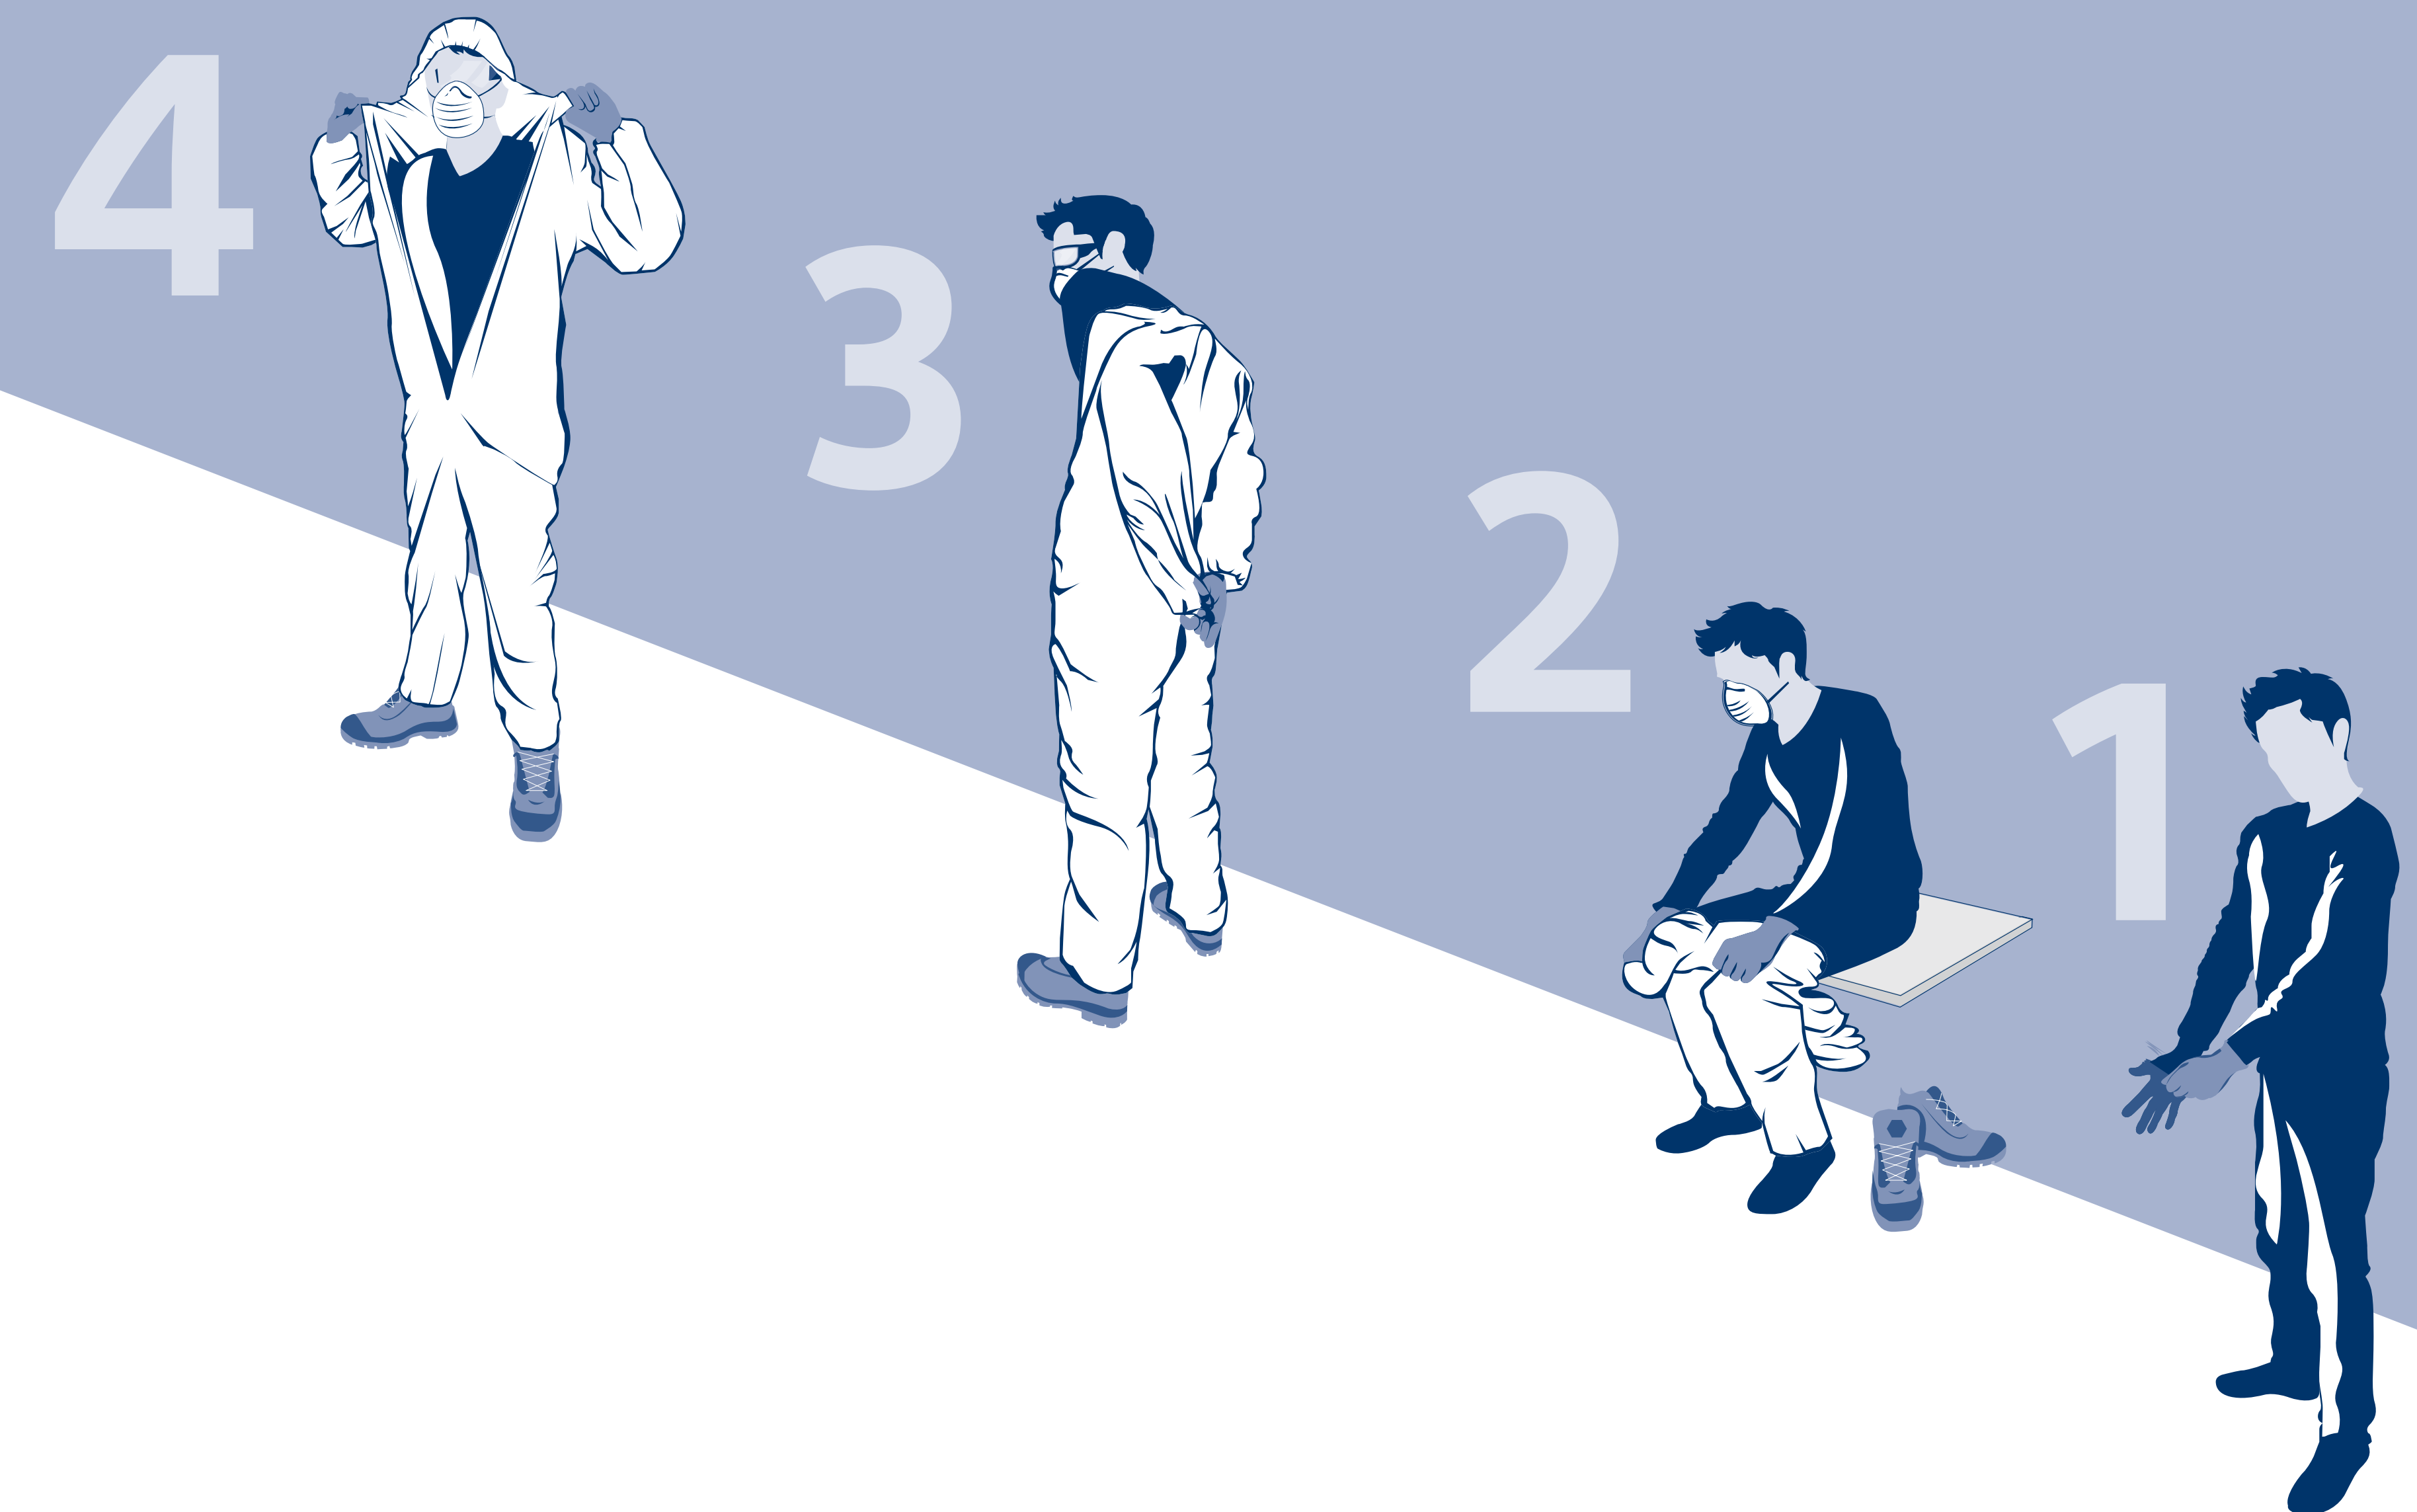

\* For Tyvek® 600 Plus and Tyvek® 800 J, use self-adhesive tape to seal the zipper and chin flaps.