

Technical Data Sheet – IPS™ SatWipes® Solutions

Based on Sontara 8642 & 8654



Product Description

Available with re-usable center-pull canister which eases use in workshops and increase wipe efficiency. Large range of presaturation solutions such as:

- 100% IPA (usually for cleanroom applications)
 - 90:10 IPA/DI (typically electrofusion welding wipes)
 - 85:15 IPA/DI
 - 70:30 IPA/DI (by far the most popular for paint preparation)
 - 60:40 IPA/DI
 - 20:80 IPA/DI (for explosion areas)
 - MEK
 - Diestone DLS
 - Ethanol/Methanol blends
- And many more

We offer customized chemistry solutions depending on how the wipes will be used. For any other solvent-based or water-based saturation solution, please contact us for further information.

Description	Size (mm)	Number of wipes / pouch	Pouches / Carton	Cartons / Pallet
Precut roll	150mm x 230mm	100	12	64
Precut roll	300mm x 230mm	50	12	64

Uses

For dust control, surface cleaning & decreasing and preparation prior to bonding, painting or similar tasks.

Technical Characteristics

	8642	8654
Type of wipe:	Sontara Nonwoven	Sontara Nonwoven
Wipe fabric:	Rayon / Lyocell	Rayon / Lyocell
Colour:	White	White
Weight:	60 gr/m ²	50 gr/m ²
Chemistry:	Customer specific	Customer specific
Aerospace certified:	Yes	No

IPS™ SatWipes® style 8642 meet the following aerospace requirements:


- Aerospace Material Specification AMS 3819C, Class 2, Grade A
- Boeing Material Specification BMS 15-5G, Class A
- Production facility is AS9100C and ISO 9001-2015 certified

Benefits of presaturated wipes

The system of pre-saturated wipes provides economic, environmental and safety advantages for users compared to the method of using solvents and chemicals in bulk with wipes. It helps to:

- Standardize cleaning and preparation operations
- Improve quality and production line performance
- Lower the quantity of product used
- Reduce waste; for the same surface, the volume of wipes used is 5 to 10 times less than the volume of traditional cloths
- Reduce VOCs (Volatile Organic Compounds) by 65% to 100% as targeted by the European Legislation
- Improve users' safety; drastically reduces the quantity of solvent released in the atmosphere. No risk of accidental spillage of drums full of flammable liquids (fire hazard). Pre-saturated wipes are easy to use, handle and store compared to cloths and solvent drums

Instructions

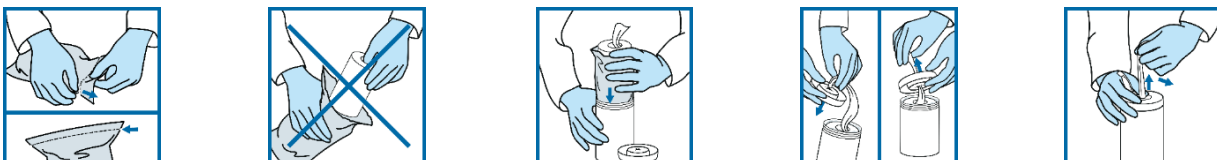

1. Remove or cut the top of the pouch.
2. Do not remove the pre-saturated roll from the pouch.
3. Place the pouch in the reusable plastic dispenser with the spring lid.
4. Pull the first wipe from the center of the roll and feed it through the lid of the dispenser.
5. Pull one wipe at a time to have an efficient and effective wiping procedure.

Keep the dispenser closed to prevent wipes from drying out or being contaminated, when not in use.

Precautions for use and storage

Please read the safety data sheet of the particular IPS™ SatWipes® solution.

Storage - Keep away from the sun and temperature above 5° Celsius.

For further information, please contact IPS-Group A/S on:

Tel.: +45 49 13 28 00

Mail: INFO@IPS-GROUP.DK